

PANASONIC KXT 308 or 616 TIME CHANGE

1. From ext 11, lift handset and dial 77
2. Enter the hours with 2 digits
3. Enter the minutes with 2 digits
4. Dial 0 for AM or 1 for PM
5. Dial #

PANASONIC KXTA 624 & KXTES824 TIME CHANGE

1. From ext 101, press the "Program" key
2. Dial 0 followed by 2 digit year, 2 digit month, 2 digit date, 1 digit weekday(1 for Monday, 2 for Tuesday etc) , 2 digit hour, 2 digit minute, 0 for AM or 1 for PM
3. Press the "Auto dial/Store" Key
4. Press the "Program" Key.

PANASONIC KXTD TIME CHANGE

1. From the main extension, press the "Program" Key followed by * # 1234(or 5566)
2. Dial 000
3. Press the "SP-Phone" key
4. Enter 2 digit year
5. Press the "fwd/dnd" key
6. Press the "auto/answer" key until proper month appears on screen
7. Press the "fwd/dnd" key
8. Enter 2 digit day
9. Press the "fwd/dnd" key
10. Press the "auto/answer" key until proper weekday appears on screen
11. Press the "store" key
12. Press the "SP-Phone" key
13. Enter 2 digit hour
14. Press the "fwd/dnd" key
15. Enter 2 digit minute
16. Press the "fwd/dnd" key
17. Press the "auto/answer" key until proper AM or PM appears on Screen
18. Press the "hold" key
19. Press the "program" key