

SAMSUNG SKP 816 TIME CHANGE

1. From any display phone, leave handset down and dial #20 5566(or 1234) 1 #
2. Dial #55 and display shows ; YYMMDDWHHMM where YY is 2 digit year, MM is month, DD is date, W is weekday (where Monday is 1, Tuesday is 2 etc), HH is 24hr hour and MM is minutes. Dial this 11 digit string and finish with #.

SAMSUNG DCS RANGE TIME CHANGE

1. Firstly, you must enable customer programming from any display telephone.
2. Leave handset down and press "TRSF" key
3. Dial 200
4. Dial 4 digit pass code (usually defaulted to 1234)
5. Dial 1 to enable
6. Press the "TRSF" key

7. You must begin programming within 30 seconds
8. Press "TRSF" key and then dial 505
9. The display shows "WMMDDYY:HHMM" where W is weekday(1=Monday, 2=Tuesday etc), MM is month, DD is date, YY is year, HH is hour and MM is minutes
10. Dial the new 11 digit date and time.
11. Press the "TRSF" key.